(STERN Instruction Manual)








Please read the instruction manual before installation.

Please turn off the power supply before installation, operated by professional personnel.


Once the ceiling is not strong enough, suggest to use self-made wooden frame for connecting. Avoid using wet cloth to clean the fitting.

The light source of this product is not replaceable, when damaged or reached the service life should be replaced, and do a good job of recycling. Please do not assemble the product without authorization, any damage caused by disassembling without authorization will no longer be covered by the warranty.


| Model | | Input | Dimension A*B(mm) | Cutout(mm) | Remark |
|----------------------|----------|--------------|-------------------|------------|--------|
| 81554408 81553008 | | AC 220V~240V | Ø115*135 | Ø105 | |
| 81554608 81554838 | 81554808 | | Ø135*152 | Ø125 | |
| 81553098 81554898 | | | | | |

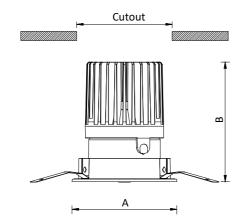


Applicable ceiling thickness 5-30mm

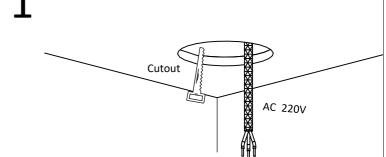


Open the mounting hole on ceiling according to the cutout size, and pass the wires through the hole.

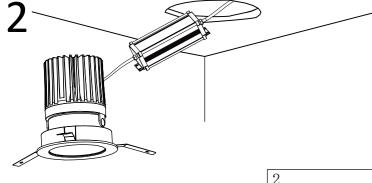


 Cord according to the wiring instruction marked on the driver, and do the insulation protection well. And insert the driver into cutout on the ceiling.




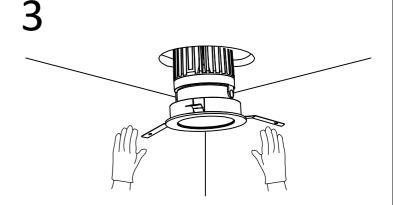

Press the mounting spring into the cutout in the ceiling and push the luminaire in.

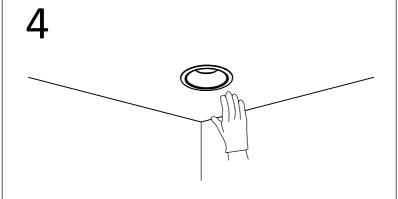

The installation is completed until the frame is flat with the ceiling. Adjustable downlight series can adjust the irradiation angle according to the demand to meet the lighting requirements.

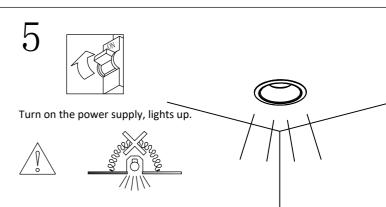

Warning: The fitting should be never covered by insulation gasket or similar materials under any circumstance.

Please ensure that the wires are conneced correctly before turning on the power supply. Do not look emitting lights directly to avoid burning your eyes.